



# QUAD

MJH-DFR-Q

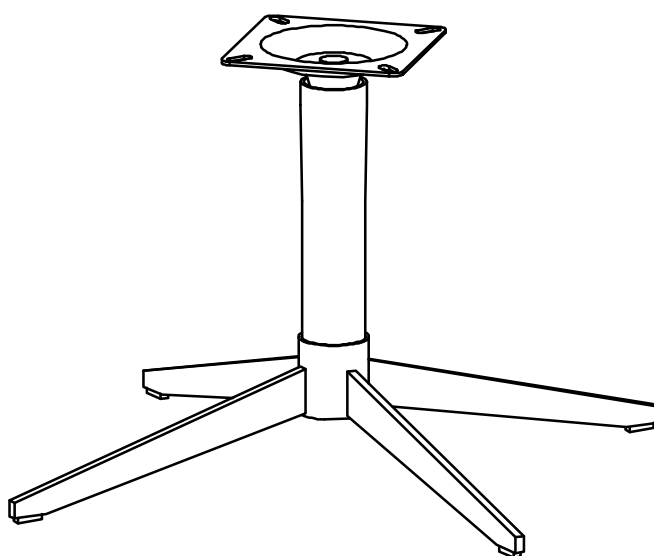


# Ensure all parts are included

if not,contact [support@modeus.com](mailto:support@modeus.com)

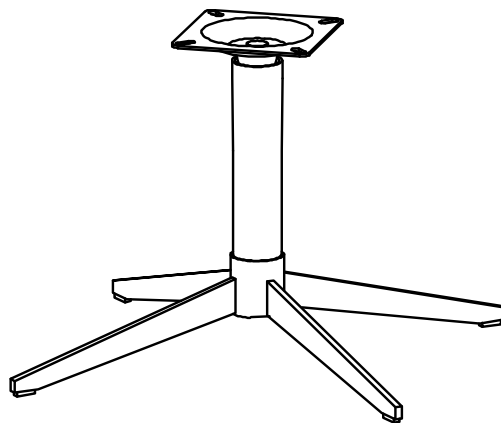

base x 1



allen range x 1  
( M6 )



bolt x 2  
( M6X20 )



bolt x 2  
( M6X16 )





flat washer x 4  
( M6X16Ø )


# Assembly steps

## step 01

select assembly hole-B for pairing with the base

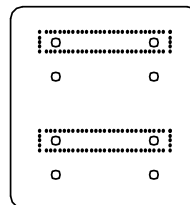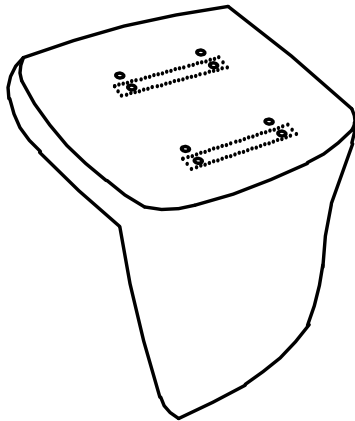

A Position

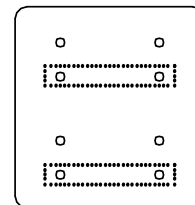

B Position

## step 02

make sure that the bolts are tightly fastened

